 



Návod na montáž trampolíny

AGA SPORT FIT


AGA FIT(6FT,8FT,10FT,12FT,14FT,)

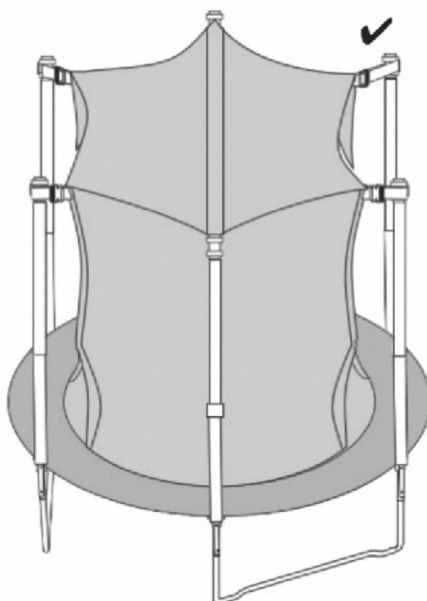


AGA SPORT FIT TRAMPOLÍNA					
PRIEMER TRAMPOLÍNA	6 ft	8 ft	10 ft	12 ft	14 ft
	180 cm	250 cm	305 cm	366 cm	430 cm
A - RÁM	6	6	6	8	12
B- ODRAZOVÁ PLOCHA	1	1	1	1	1
C - KRYT	1	1	1	1	1
D - PRUŽINY	36	48	54	72	96
E - PREDLŽENÉ NOHY	0	0	0	8	12
F - NOHY TVARE „U”	3	3	3	4	6
G - ŠROUBY	0	0	0	8	12
H - NÁSTROJ	1	1	1	1	1

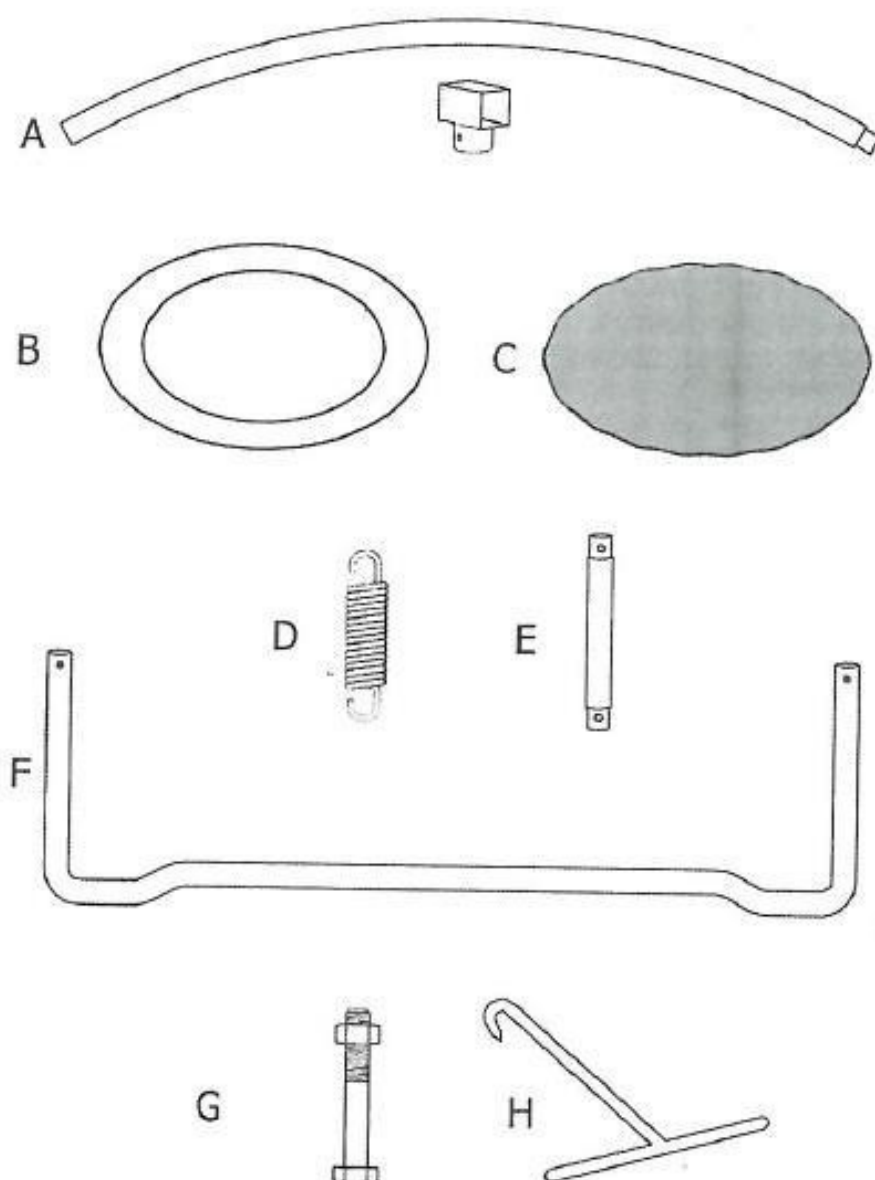 


	PRIEMER TRMAPOLÍNA	180 cm	250 cm	305 cm	366 cm	430 cm
		6FT	8FT	10FT	12FT	14FT
A	Šrouby (75mm)	12	12	12	16	12
B	Klobúček	6	6	6	8	6
C	Šnúrka	1	1	1	1	1
D	Horná tyč	6	6	6	8	6
E	Spodná tyč	6	6	6	8	6
F	Ochranný sieť	1	1	1	1	1
G	Klúč	1	1	1	1	1


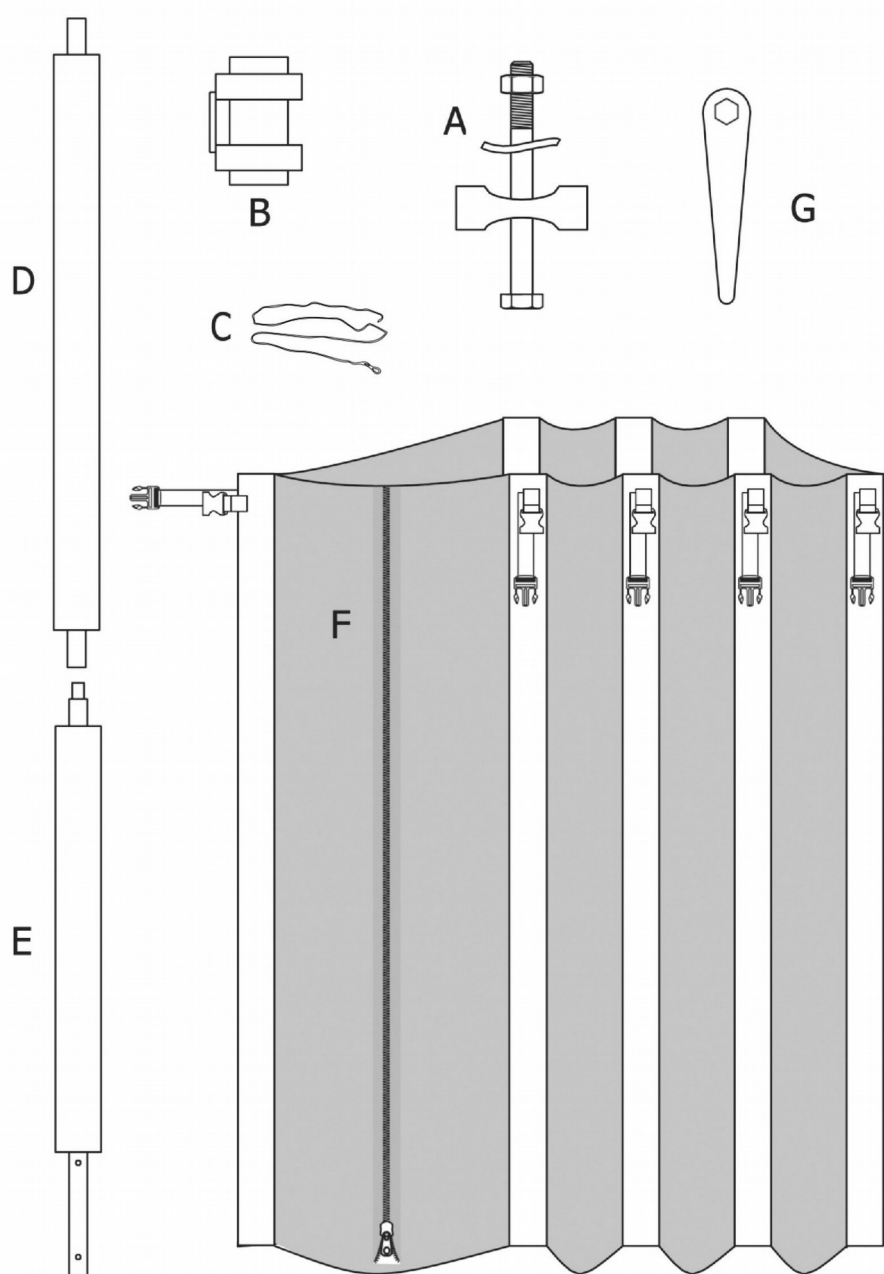 



①


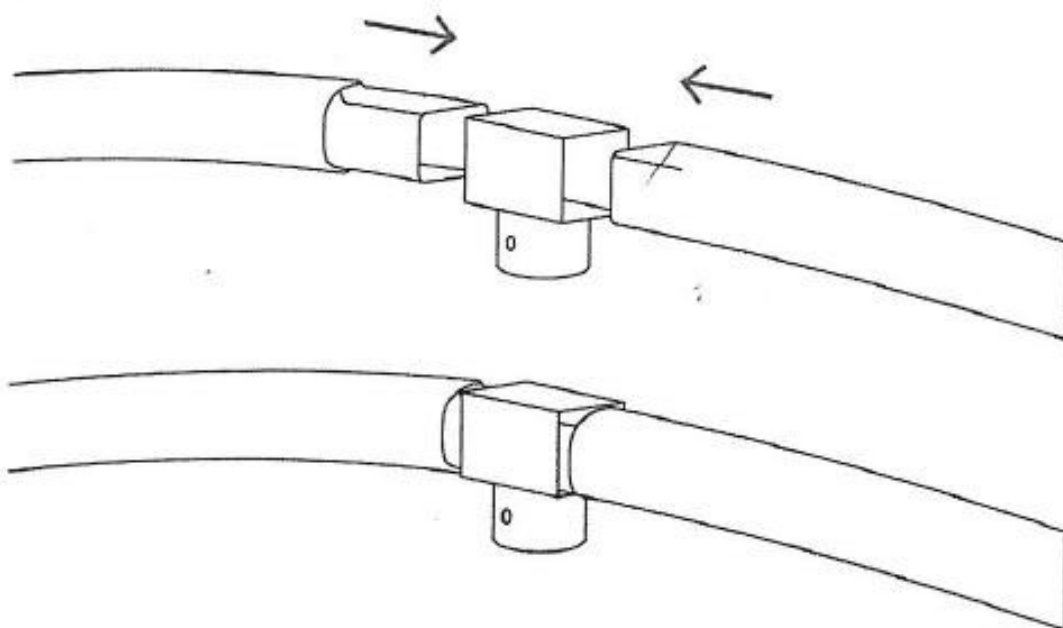 



②

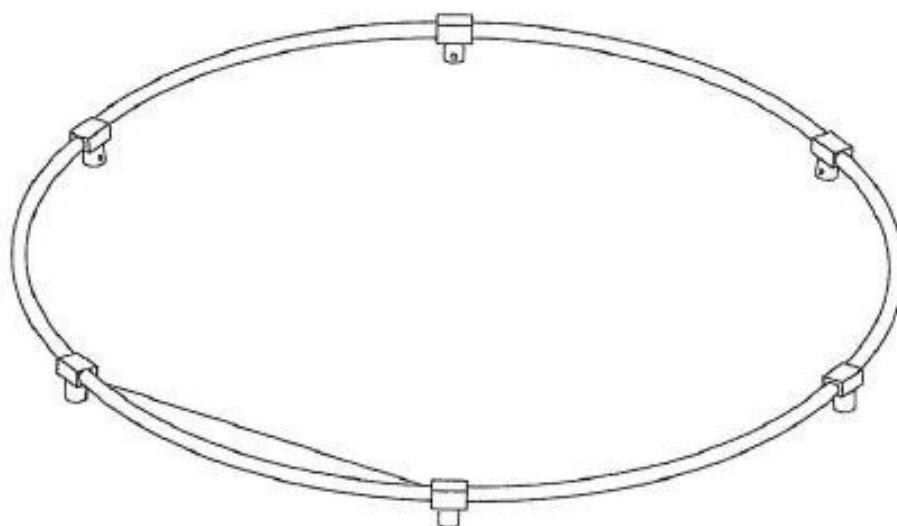 


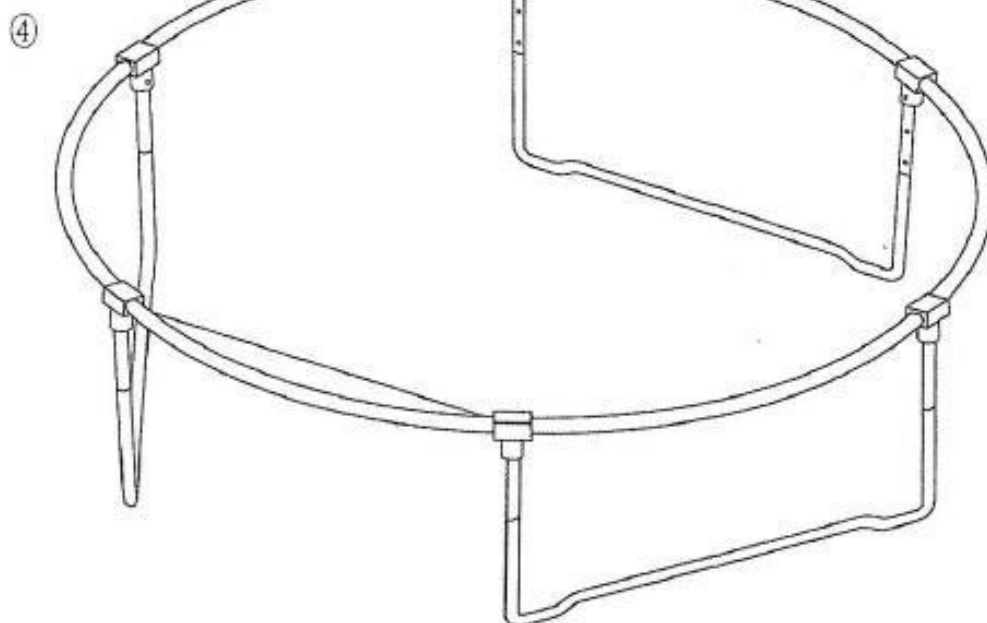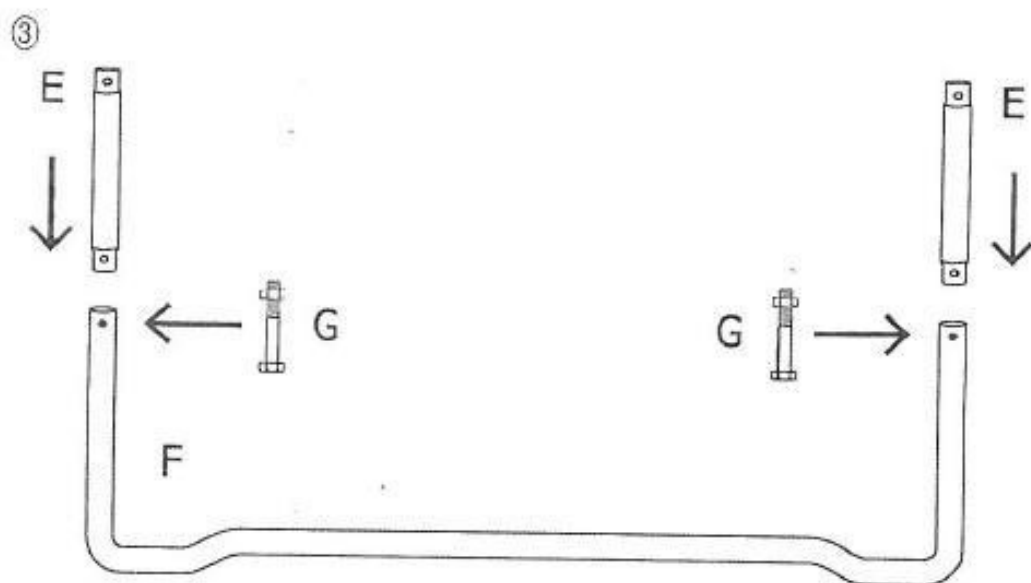  

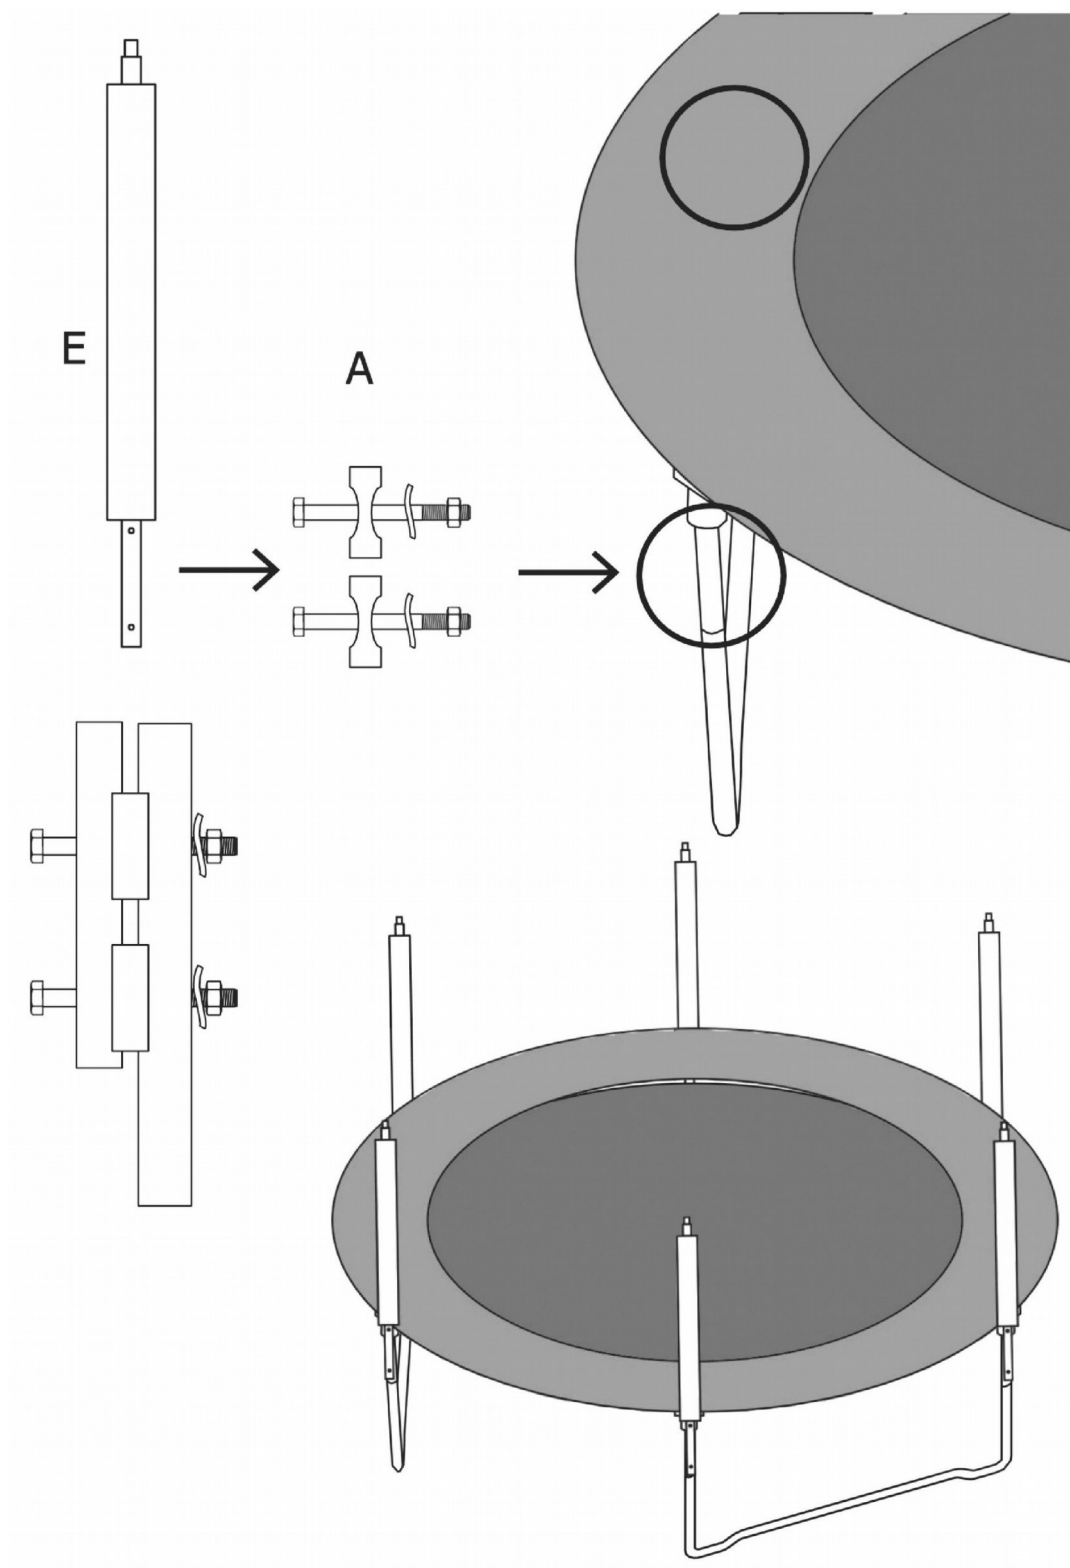 

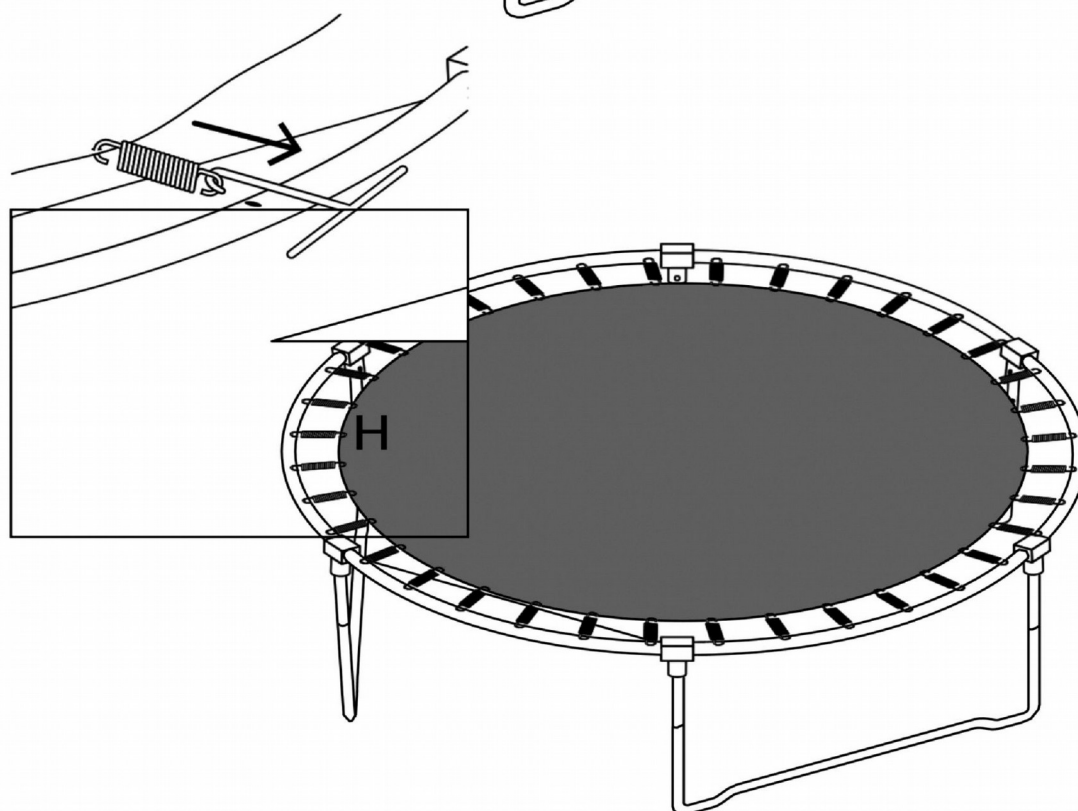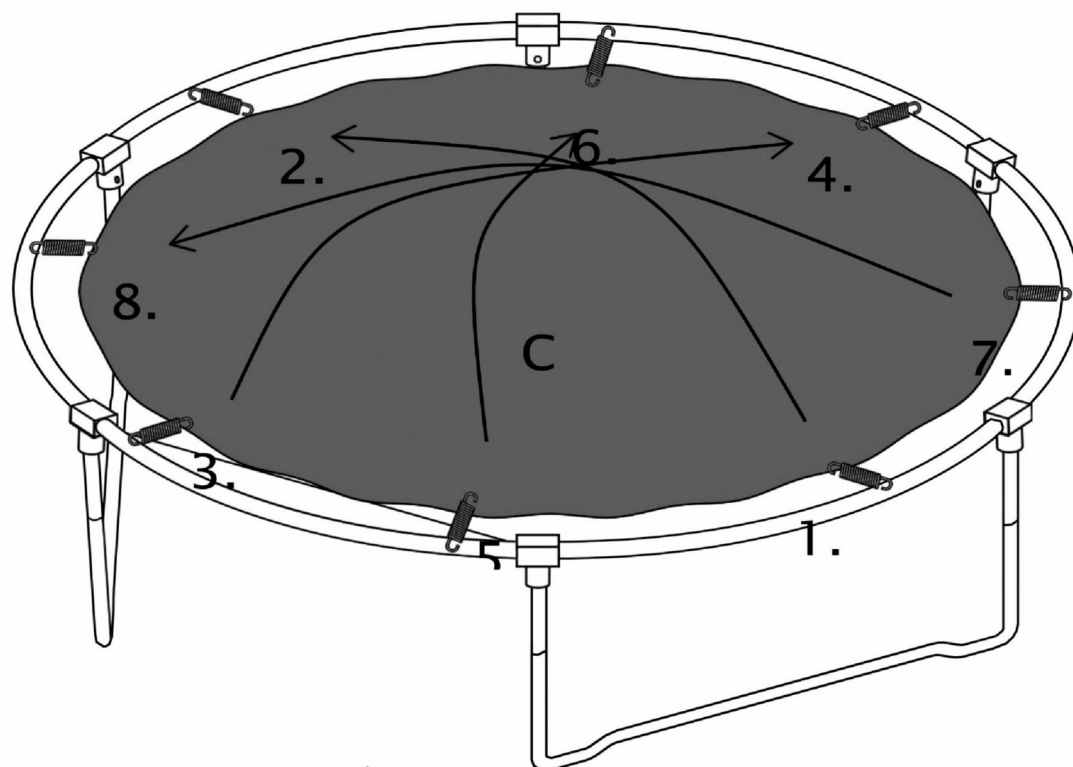  

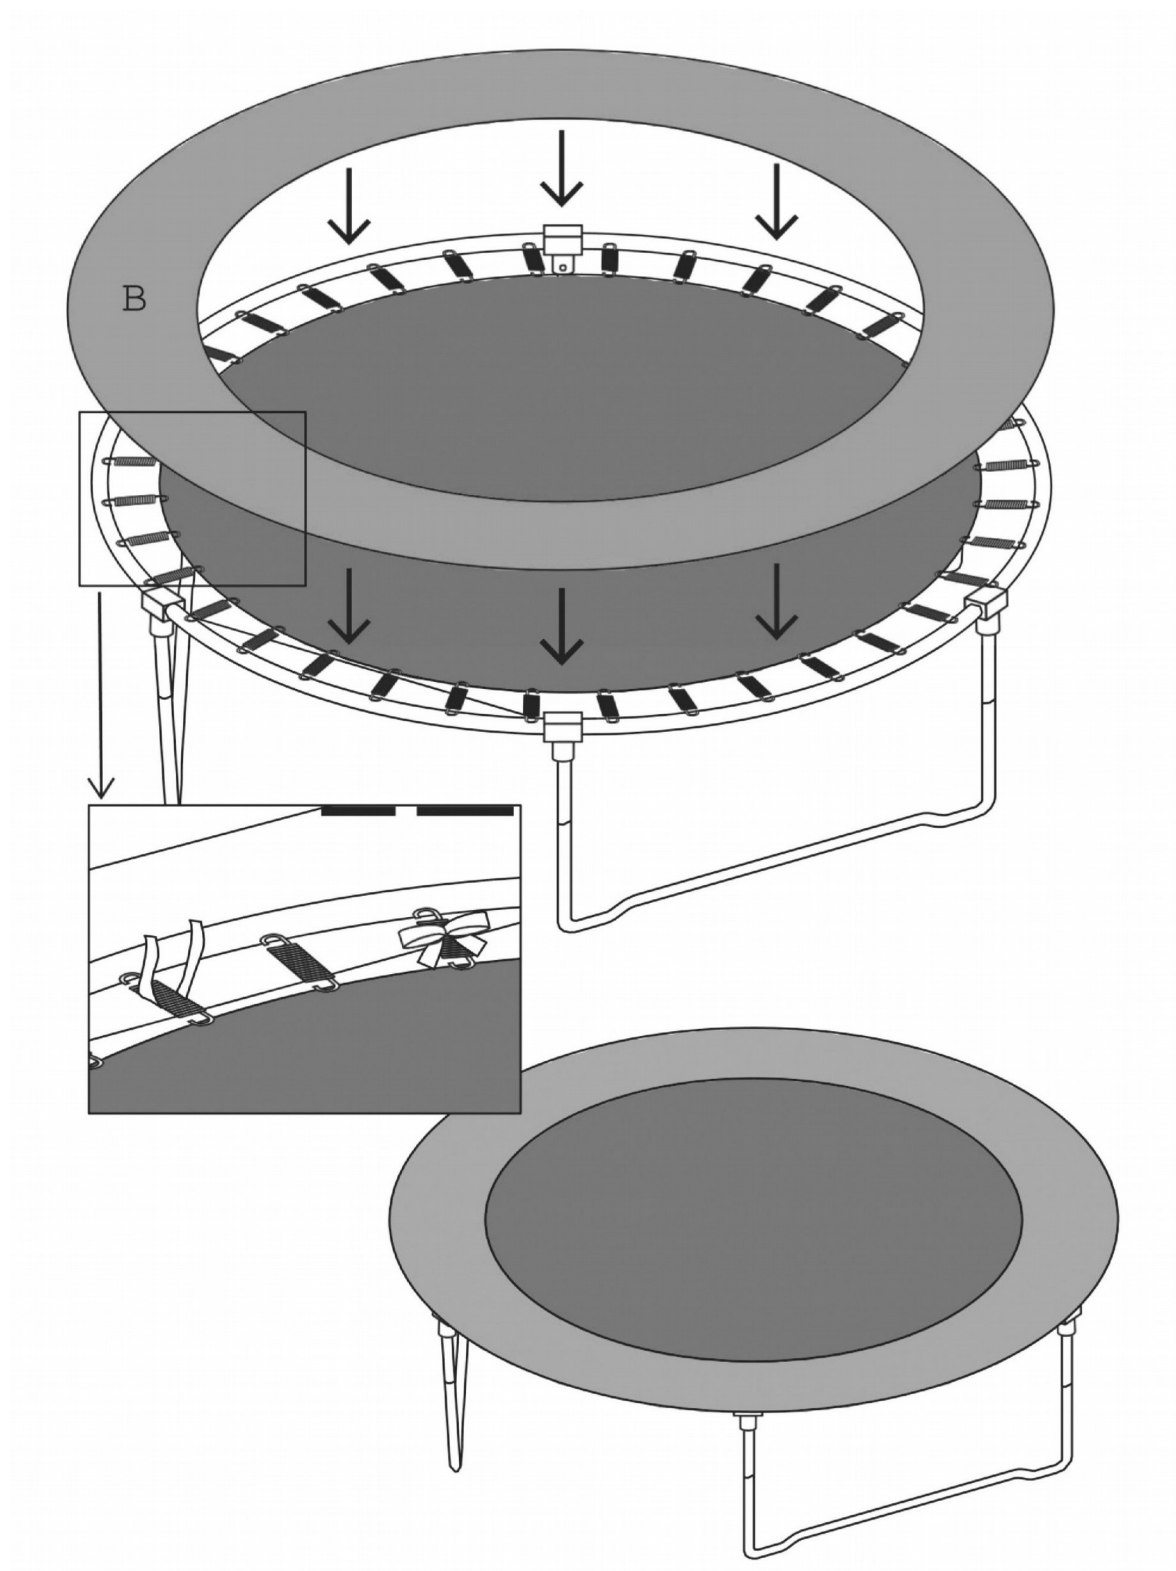  

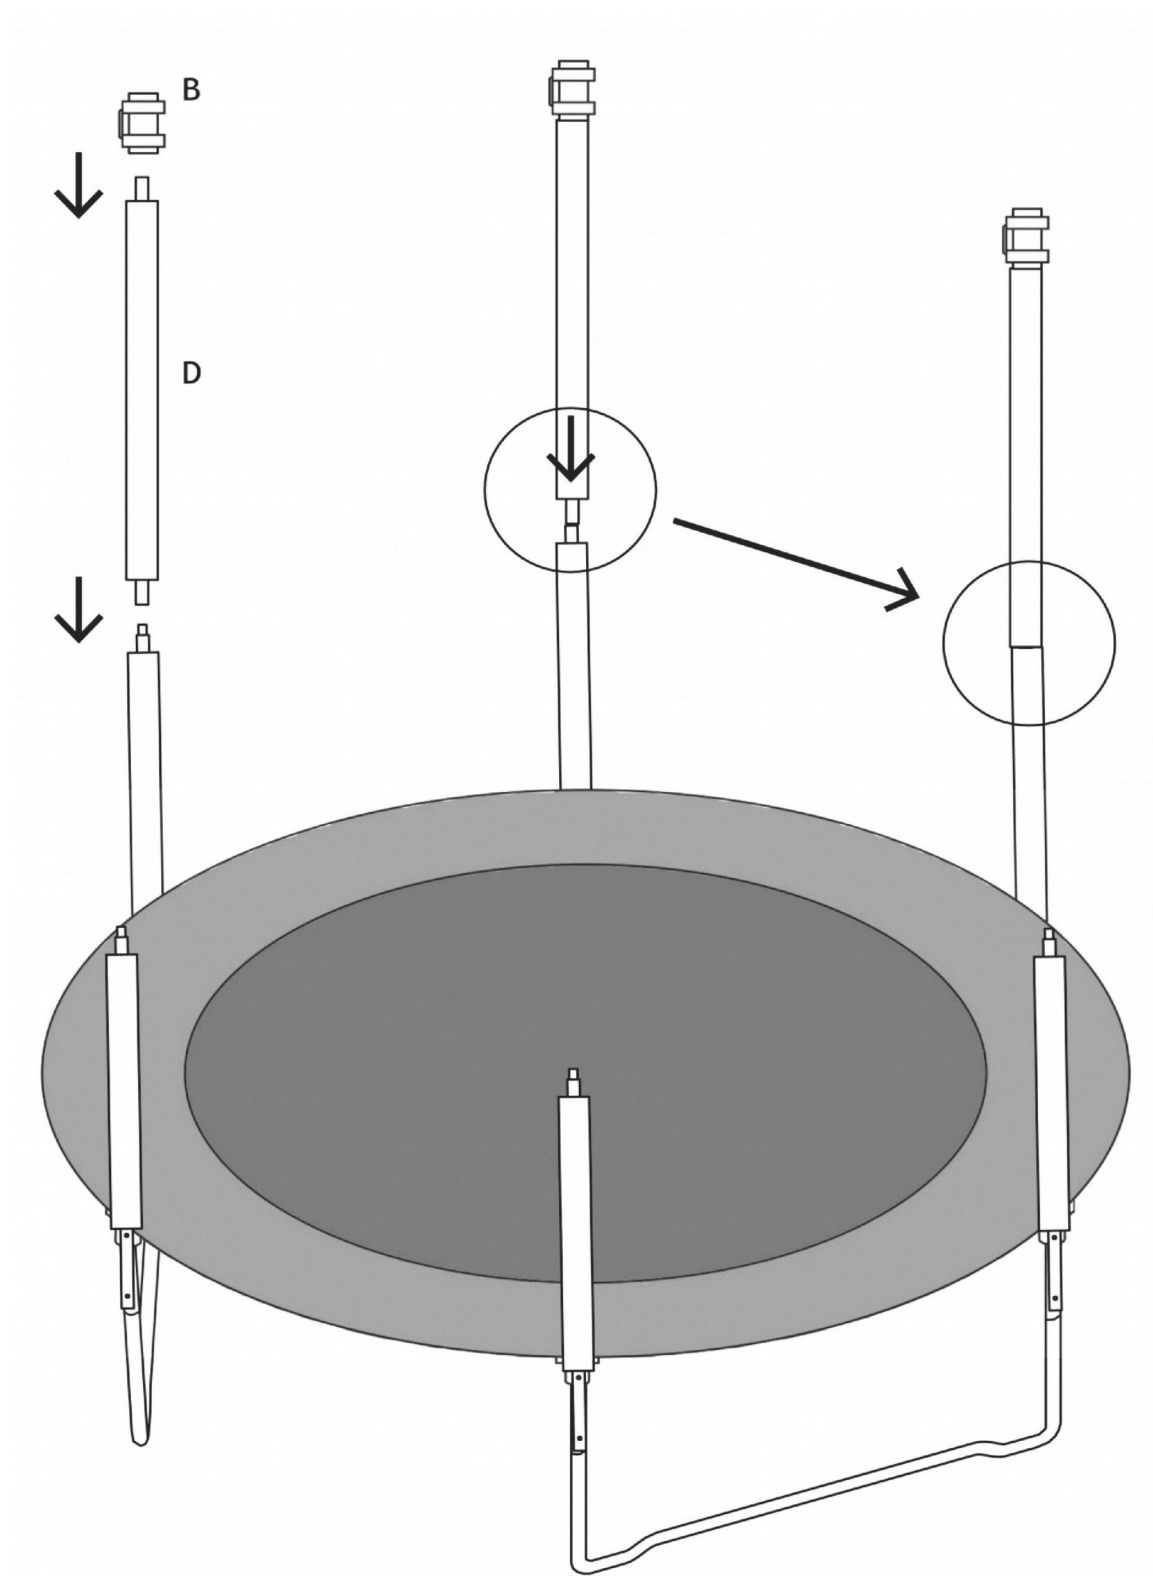

AGA SPORT FIT trampolína _____

