



# Návod na montáž trampolíny

## AGA SPORT PRO

AGA PRO(5FT,6FT,7FT,8FT,9FT,10FT,11FT,12FT,13FT,14FT,15FT,16FT,17FT,)

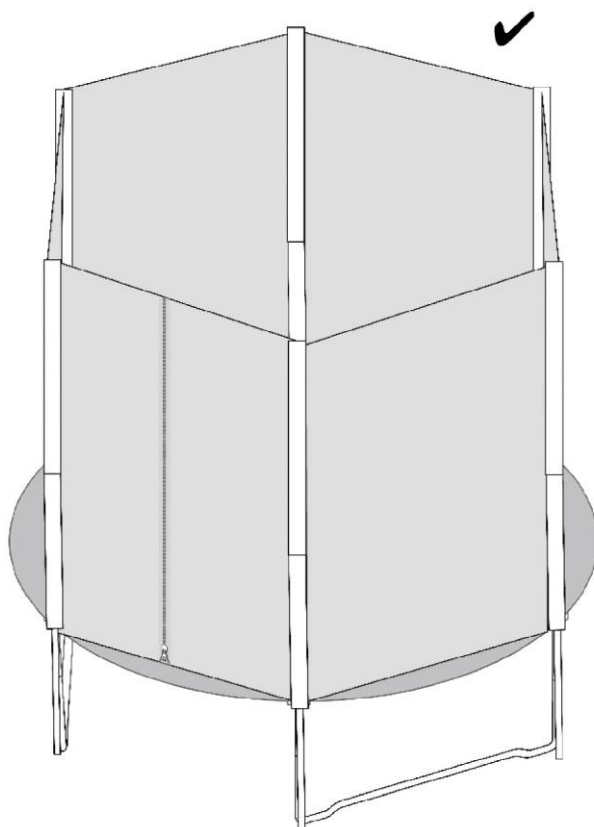

NÁZOV SÚČIASTOK	PRIEMER TRAMPOLÍNA												
	5 ft 150 cm	6 ft 180 cm	7 ft 220 cm	8 ft 250 cm	9 ft 275 cm	10 ft 305 cm	11 ft 335 cm	12 ft 366 cm	13 ft 400 cm	14 ft 430 cm	15 ft 460 cm	16 ft 500 cm	17 ft 518 cm
A - RÁM	6	6	6	6	6	6	8	8	12	12	12	12	12
B- ODRAZOVÁ PLOCHA	1	1	1	1	1	1	1	1	1	1	1	1	1
C - KRYT PRUŽÍN	1	1	1	1	1	1	1	1	1	1	1	1	1
D - PRUŽINY	30	36	42	48	54	60	64	72	84	96	108	108	108
E - PREDLŽENÉ NOHY	0	0	0	6	6	6	8	8	12	12	12	12	12
F - NOHY TVARE U	3	3	3	3	3	3	4	4	6	6	6	6	6
G - ŠROUBY	0	0	0	0	0	0	0	0	12	12	0	0	0
H - NÁSTROJ	1	1	1	1	1	1	1	1	1	1	1	1	1

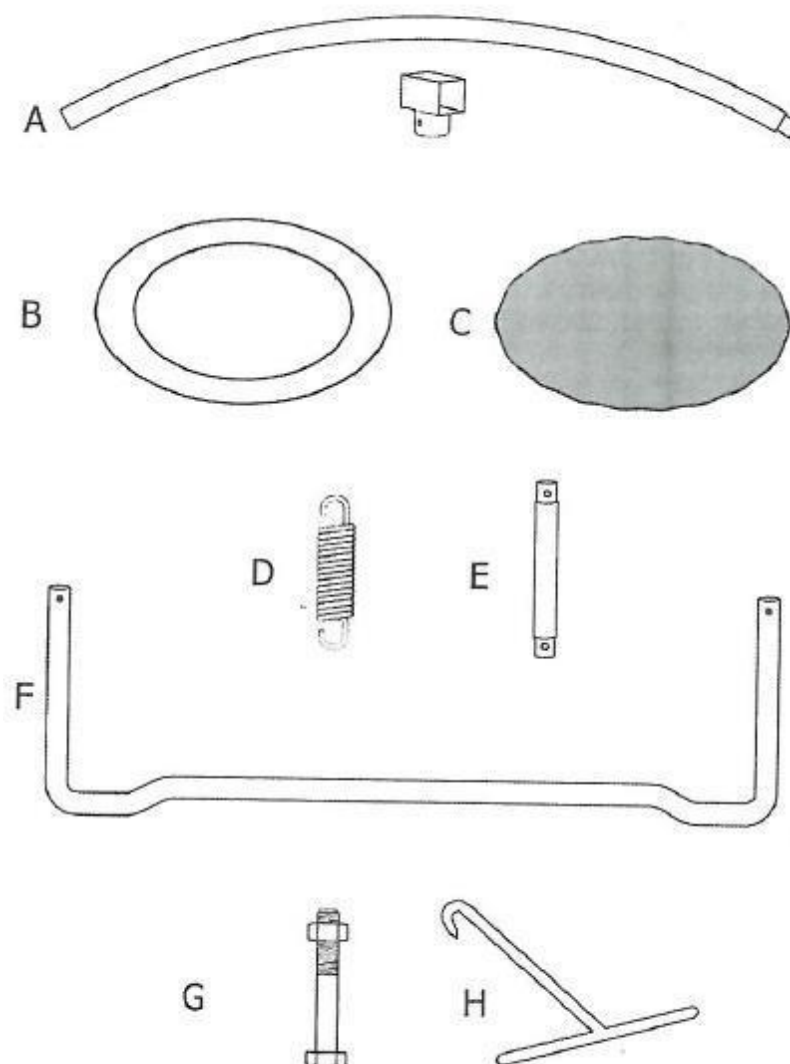

Názov súčiastok	PRIEMER TRAMPOLÍNA													
	5 ft 150 cm	6 ft 180 cm	7 ft 220 cm	8 ft 250 cm	9 ft 275 cm	10 ft 305 cm	11 ft 335 cm	12 ft 366 cm	13 ft 400 cm	14 ft 430 cm	15 ft 460 cm	16 ft 500 cm	17 ft 518 cm	
A – Rychlonapínák	12	12	12	12	12	12	16	16	12	12	24	24	24	
B- Montážny kľúč	1	1	1	1	1	1	1	1	1	1	1	1	1	
C – Ochranný sieť	1	1	1	1	1	1	1	1	1	1	1	1	1	
D – Horný tyč	6	6	6	6	6	6	8	8	6	6	12	12	12	
E – Spodný tyč	6	6	6	6	6	6	8	8	6	6	12	12	12	

