


Návod na montáž trampolíny

AGA SPORT TOP

AGA TOP(5FT,6FT,7FT,8FT,10FT,12FT,13FT,14FT,16FT,17FT)

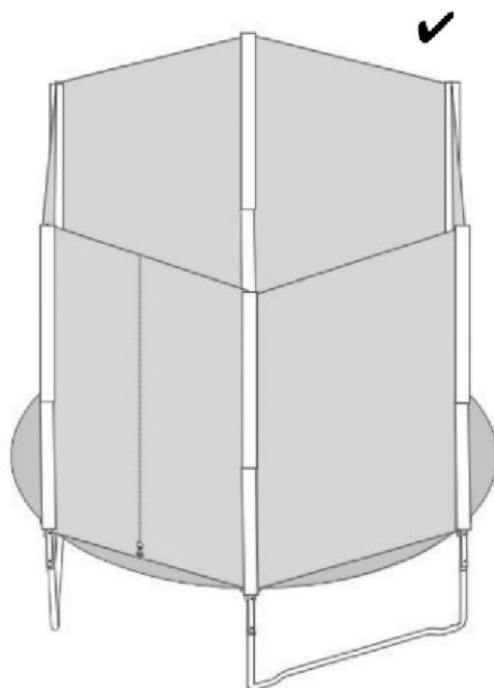

Názov súčiastok	PRIEMER TRAMPOLÍNA									
	5 ft	6 ft	7 ft	8 ft	10 ft	12 ft	13 ft	14 ft	16 ft	17 ft
	150 cm	180 cm	220 cm	250 cm	305 cm	366 cm	400 cm	430 cm	500 cm	518 cm
A - RÁM	6	6	6	6	6	8	8	8	12	12
B- ODRAZOVÁ PLOCHA	1	1	1	1	1	1	1	1	1	1
C - KRYT PRUŽÍN	1	1	1	1	1	1	1	1	1	1
D - PRUŽINY	30	36	42	42	54	72	80	80	108	108
E - PREDLŽENÉ NOHY	0	0	0	0	0	8	8	8	12	12
F - NOHY TVARE U	3	3	3	3	3	4	4	4	6	6
G - ŠROUBY	0	0	0	0	0	8	8	8	12	12
H - NÁSTROJ	1	1	1	1	1	1	1	1	1	1

